

## How to upgrade the system

1. In the "**System**" directory of "App Center", it needs to be plugged into a USB disk. If not, system interface as shown in the below figure.




The upgrade takes about several minutes. Do not perform any operations during the upgrade and ensure that the power supply is stable. Otherwise, the system may start abnormally. After the firmware upgrade starts, the system automatically restarts to enter the upgrade mode

U disk is not mounted!



2. After inserting USB disk, update package can be loaded if there is an update package in the USB disk; if not, will display "No update package found! ", as shown in Figure 1-6. If the update package in the USB disk cannot be upgraded, the system interface will prompt the corresponding reason, as shown in Figure 1-7.

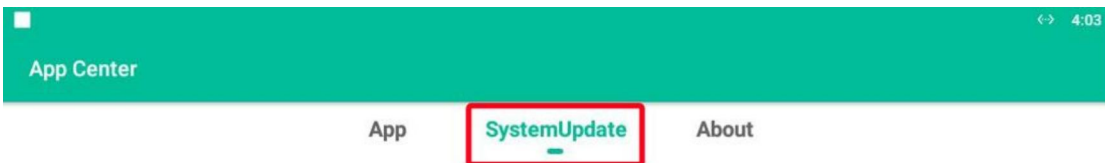

The upgrade takes about several minutes. Do not perform any operations during the upgrade and ensure that the power supply is stable. Otherwise, the system may start abnormally. After the firmware upgrade starts, the system automatically restarts to enter the upgrade mode

No update package found!



Figure 1-6

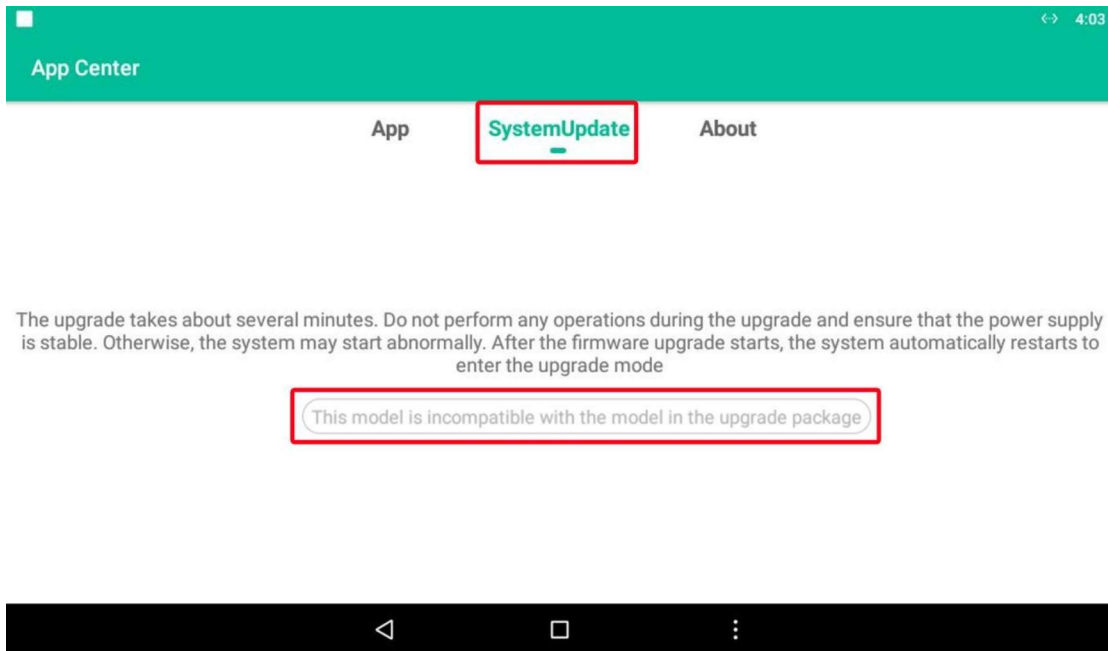


Figure 1-7

- When the update package on the USB disk is updatable, can click "**Firmware update**" button, as shown in Figure 1-8, or drop down the status bar to see the upgrade prompt,click "**App Center**" prompt to upgrade, as shown in Figure 1-9. (Note:You cannot exit the App after clicking Upgrade, the system will be upgraded and restarted within a few minutes.)

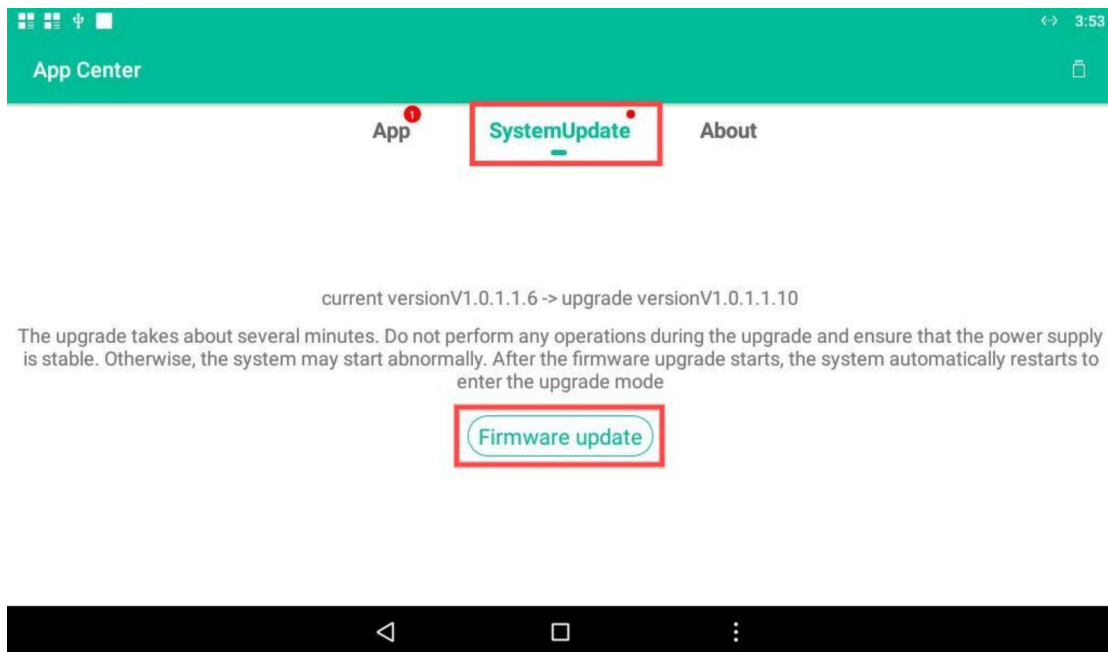


Figure 1-8


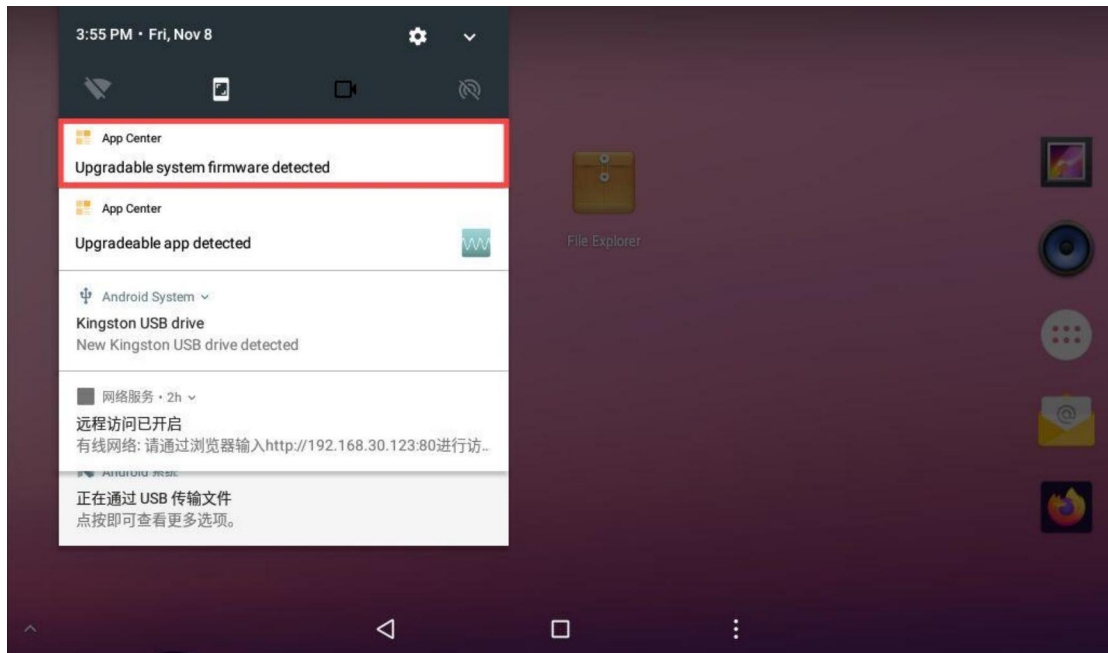


Figure 1-9

4. After clicking "**Firmware update**" button, the update package is parsed, as shown in the below figure.

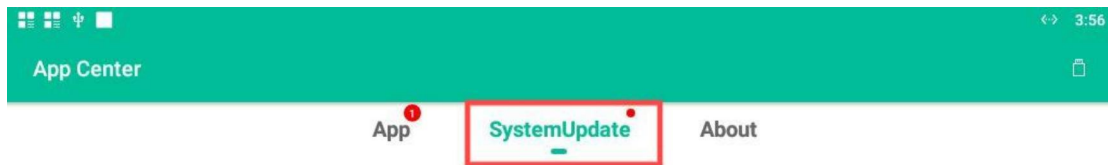


current versionV1.0.1.1.6 -> upgrade versionV1.0.1.1.10

The upgrade takes about several minutes. Do not perform any operations during the upgrade and ensure that the power supply is stable. Otherwise, the system may start abnormally. After the firmware upgrade starts, the system automatically restarts to enter the upgrade mode

Please wait while parsing...



5. Enter the firmware upgrade unpacking step, as shown in the below figure.

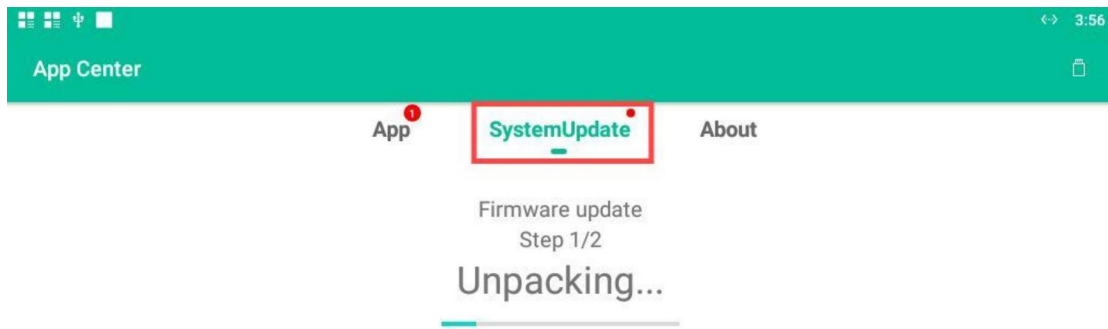

The complete update takes about several minutes. Do not perform any operations during the update and ensure that the power supply is stable. Otherwise, the machine may start abnormally. After the firmware upgrade starts, the system automatically restarts to enter the upgrade mode.



6. After the firmware upgrade package is unzipped, the system will automatically update and restart the instrument, as shown in the below figure. (Note: To upgrade the system, the APP that comes with the system will also be upgraded according to the update package.)

